

## Installation of Walls


Before setting up annexe, three initial steps need to be completed.

- 1) Top mounting brackets attached to caravan wall.
- 2) Drilling of roll-out awning barrel holes.
- 3) Attaching clip-on studs for draft strip.

These tasks, using the supplied INSTALLATION KIT, and if done according to the instructions supplied, can be done in just over ten minutes by the average person.

**INSTALLATION KIT:**  
The installation kit includes:-

- 1) One Phillips head screw bit for cordless drill/power drill
- 2) Small 1/8 drill bit for awning barrel holes
- 3) Large 3/8 drill bit
- 4) Stainless counter-sunk screws
- 5) Press-studs
- 6) Top mounting brackets
- 7) self taping screws

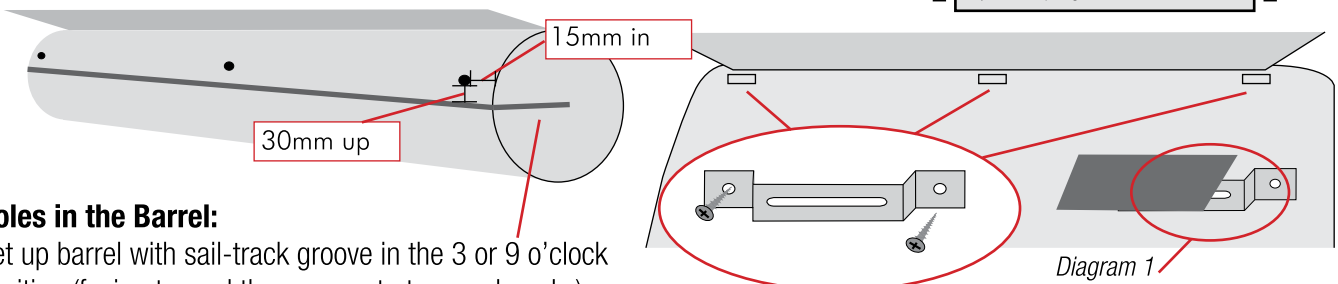


### Holes in the Barrel:

Set up barrel with sail-track groove in the 3 or 9 o'clock position (facing toward the van - not at ground or sky). Mark the 2 edge hole positions 30mm **up** from sail-track groove and **in** 15mm from edge of vinyl. Using 1/8 drill, drill through the aluminium barrel. Enlarge the hole using the 3/8 drill supplied.

Measure the halfway point between the two drilled holes, mark 30mm up from sail-track and repeat the drilling process.



### Fitting Anti-Flap Rafter Brackets to Van:

Position outside bracket on the wall of van, immediately under vinyl and so that 10mm of bracket groove is exposed beyond the edge of the vinyl (see diagram 1). Use self-tapping screws to attach bracket direct to van wall. Measure equal distance(s) between edge brackets for additional brackets. Mark and attach as required.

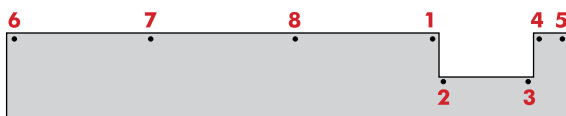

### Fixing Draftstrip to Van Wall:

Hold draftstrip around door in position. Start with Stud 1, hold and mark where centre of stud will go with pencil. Place self-tapping screw through stud (see diagram 1) and screw onto mark on wall of van. Repeat process on stud 2 through to end....position stud, mark with pencil, screw stud onto wall of van.

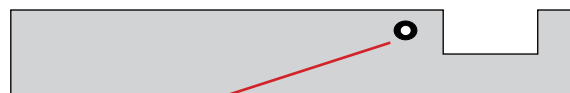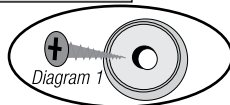

### Door Stop:

If the door-stop is in the way of the draft-strip, simply remove before fitting draft-strip. Attach draft-strip, mark door-stop position on draft-strip with pencil. Screw door-stop back on (over the draft-strip), mark around door-stop with pencil, remove door-stop. With scissors, cut a hole approx 3mm outside the pencil line. Re-attach the door-stop direct to van through the newly cut hole.